

## KEYBOARD LAYOUT

.C010\$



ENGLISH  
(USA)

.C018\$



ENGLISH  
(UK)

.C012\$



FRENCH

.C011\$



GERMAN

.C014\$



ITALIAN

.C013\$



SPANISH

18

IntelliScanner emulates a keyboard. If you're using a keyboard layout other than the default, select it here.

.C009\$



JAPAN  
(106 key)

.C025\$



CANADIAN  
(FRENCH)

.C034\$



CANADIAN  
(TRADITIONAL)

.C029\$



NORWEGIAN

.C026\$



SWEDISH

.C031\$



PORTUGUESE

19

## KEYBOARD LAYOUT

.C017\$



CZECH  
(QWERTY)

.C022\$



CZECH  
(QWERTZ)

.C021\$



HUNGARIAN  
(QWERTZ)

.C024\$



HUNGARIAN  
(101 KEY)

.C016\$



SWISS  
(GERMAN)

.C023\$



SWISS  
(FRENCH)

.C030\$



BELGIAN  
(AZERTY)

.C028\$



DUTCH

.C027\$



DANISH

.C032\$



SLOVAK

.C033\$



BRAZILIAN  
(PORTUGUESE)

.C015\$



ALT CODE

20

21