

SCANABOUT QUICK PAIRING GUIDE

Scanabout can be paired with any Bluetooth-enabled computer, phone, or tablet. It types barcode values as if entered on the keyboard, so it'll work with most third-party software. To set up, you need to "pair" your scanner with your device — just once, then it'll automatically reconnect in the future.

Step 1

Scan the following two barcodes, in order:



Step 2

On your device, choose the option to discover new Bluetooth devices. You'll see "IntelliScanner" on the list of discovered devices - it'll be recognized as a keyboard. Select it to begin pairing process.

Next, one of the following two things will happen:

- A. Your device will give you a PIN code to enter, or;
- B. Your device will ask you for the scanner's PIN code.

Read section A or B below for the remaining setup steps.

Step 3

A If your device gives you a PIN code to enter on the scanner...

First, scan this barcode:



Next, "type" the PIN code on your scanner, one character at a time:



Then, after scanning the PIN, scan these two barcodes in order:



COMPLETE


B If your device asks you for the scanner's PIN code...

First, enter the code 0000 on your device's keyboard.

Next, scan this barcode:



Then, scan this barcode **four times in a row**:

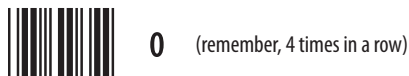

Finally, scan these two barcodes in order:



COMPLETE

Once completed, your two devices are paired — that is, when you turn on your IntelliScanner within range of your device, they'll automatically connect and you can immediately start scanning. You can also prompt a manual connection on your computer.

Troubleshooting Tips

- Some Bluetooth devices are impatient about the entry of a PIN code. If your device "gives up" before you're finished entering the code, just try pairing again.
- If you're pairing with a Mac, you may be prompted to identify your keyboard after pairing. Skip this and just close the window.